


MANUAL TRANSAXLE

Bearing (Ring Gear-Opposite Side) Disassembly Note (2WD)

1. Remove the bearing using the SST.

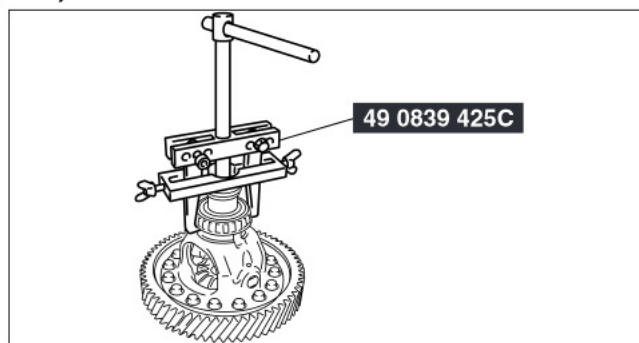


dpe515bm1008

05-15


Bearing (Ring Gear-Opposite Side) Disassembly Note (AWD)

1. Remove the bearing roller guide by prying with a flathead screwdriver as shown in the figure.

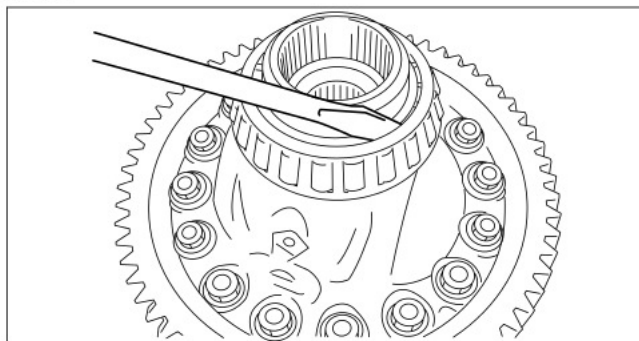

e6u515zmc103

2. Remove the bearing inner race using the SSTs.

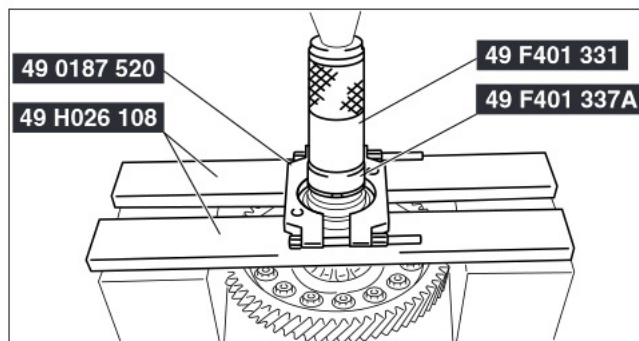

e6u515zmc104